

Exactacut



Jörg Gaumann

Founder of the German Solutions brand!

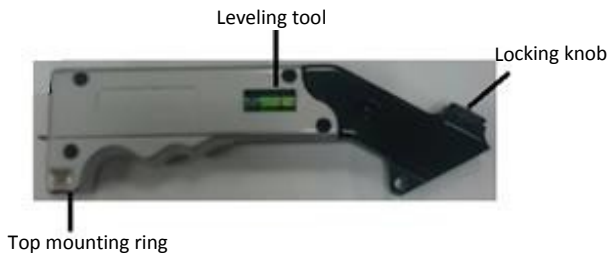 


Set Content:

- 1 pc utility knife (including leveling tool)
- 3 pcs standard blade (in a box)
- 3 pcs hook blade (in a box)
- 1 pc saw blade
- 1 pc hack saw blade
- 1pc circular blade
- 1 pc tungsten blade
- 2 pcs screwdriver bits
- 2 pcs blade cover

Description:**Utility knife:**

The utility knife includes a leveling tool, top mounting ring and locking knob for locking the blades.

**Wood saw blade:**

The saw blade works on tension. It is suitable for hard and soft wood.

Metal saw blade:

The saw blade is suitable for cutting metal and plastic.

Circular blade:

The circular blade is cutting all soft materials, like wallpapers, fabrics, cardboard, leather, insulation materials or foils.

Please use the circular blade only on a soft and stable underground (for example: plastic).

Tungsten blade:

The tungsten blade is suitable for ceramic, stone plates, glass, bricks, mirror etc. Please use some oil for the blade before starting work.

Start cutting the material and do not interrupt, even not for shape cutting.

Put a wire or something else under the cutting edge to break the material.

For curves and hard materials it is the best to use a hammer for light knocks on the backside.

Use flat nose pliers for breaking ceramic.

Straight Blade:

For cutting carpet, PVC, linoleum, carton, paper, hard foam plates or chipboards.

Hook blade:

 
 
 
The hook blade is for materials like carpet, linoleum without damaging the underground.

Screwdriver bits:

The bits are for cross-headed and slotted screws. Below the blade magazine you will find the fixture for the bits. Push the bits into the fixture.

Replacement blades:

Replacement blades for hook blade, standard blade and circular blade can be found in specialist shops (DIY store). Please note, that the blades needs to have the same size.

Illustration	Description	Working Surface
	Straight Blade	Fabrics, Carpets,
	Hooked Blade	Floor Covering, Vinyl, Rubber, Plastic, Leather
	Metal - Cutting Saw Blade	Metal & Plastic
	Wood - Cutting Saw Blade	Wood & Sheet Vinyl
	Circular Blades With Safety Fence	Wallpaper, Fabric, Leather, Cork & Foil

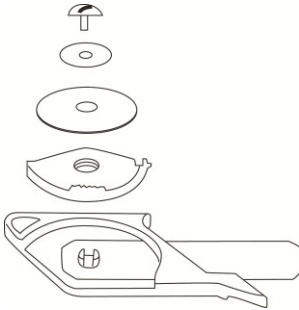
Directions of use:

There is a locking knob on the utility knife. Turn the knob to the top. You can install the blade. Please take care, that the blade notches must show to the top.

Secure the blade by closing the locking knob. Please check if the blade is fixed. Push the hook and standard blades into the blade cover after using.

Blade change:

Remove the small securing screw and exchange the blade for a new blade in the same size. Assemble the item in accordance to the drawing.

**Inserting Blades & Cutting Accessories:**

1. Make sure the blade is pushed forward to the end.
2. Unlock the locker button.
3. Pull out the blade carefully.
4. Insert the new blade and make sure the blade is pushed towards the end.
5. Push the locker button to lock and secure the blade.

To Change Blade Position:

1. Make Sure the blade is secure.
2. Push down the top button and push forward or backward to adjust the blade length.

Storage:

Save the blade after finishing the work. The blade cover is for hook and standard blade. Remove all other blades of the utility knife and store it in the suitcase.

***Warning:**

- **Blades are extremely sharp. When replacing blades handle with care! Always dispose of blades properly and with care!**
- **Components may rust if exposed to elements. Please store indoors in a dry location.**

Made in Taiwan