

## WATER RESISTANT

**C**

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

### \* Water Resistant 3ATM or 30M (100 Feet)

Shall withstand splashes of water while washing the hand. But should not be worn while swimming or diving.

### \* Water Resistant 5ATM or 50M (165 Feet)

Suitable for showering or swimming in shallow water.

### \* Water Resistant 10ATM or 100M (330 Feet)

Suitable for swimming, snorkeling, but should not be worn while scuba diving.

### \* Diver's 20ATM or 200M (660 Feet)

Meets the higher requirements of water resistant and suitable for scuba diving.

We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters)

## GENERAL CARE FOR A WATER RESISTANT WATCH

**D**

- \* DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.
- \* DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.
- \* AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STREAM OF FRESH WATER AND DRY IT WITH SOFT CLOTH.
- \* LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.

### IMPORTANT

YOUR WATCH IS EQUIPPED WITH A QUARTZ MOVEMENT, WHICH IS POWERED BY A SILVER OXIDE BATTERY.

- \* BATTERY LIFE: ABOUT 2 YRS.

# STÜHLING ORIGINAL



## INSTRUCTION MANUAL - A

## TIME SETTING A

**A**

### 2 HANDS OR 3 HANDS DISPLAY



### CROWN POSITION 1

Home Position, watch runs

### CROWN POSITION 2


#### Time Setting Position

- gently pull the Crown to this position
- If the watch is fitted with a Screw-down Crown, unscrew the crown and then gently pull the Crown.
- Rotate the Crown anti-clockwise to Set the time.
- The watch stops in this position.

## TIME SETTING B

**B**

### 2 HANDS OR 3 HANDS WITH DATE OR DAY-DATE DISPLAY

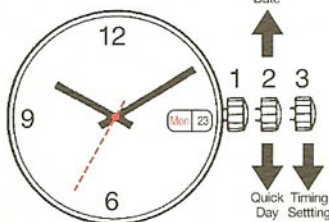

### CROWN POSITION 1

Home Position, watch runs

### CROWN POSITION 2

#### Quick Date / Day Change

- Gently pull the Crown to this position
- If the watch is fitted with a Screw-down Crown, unscrew the crown and then gently pull the Crown.
- Rotate the Crown clockwise to Set the Date and Rotate the Crown anti-clockwise to Set the Day.
- The watch runs in this position.

## TIME SETTING B (CONTINUE)

### CROWN POSITION 3

#### Time Setting Position

- Gently pull the Crown to this position
- Rotate the Crown anti-clockwise to Set the time.
- The watch stops in this position.