

 
Retro Audio

BLUETOOTH® CASSETTE PLAYER ODY-1989



USER MANUAL

Portable Cassette Player with Bluetooth transmit


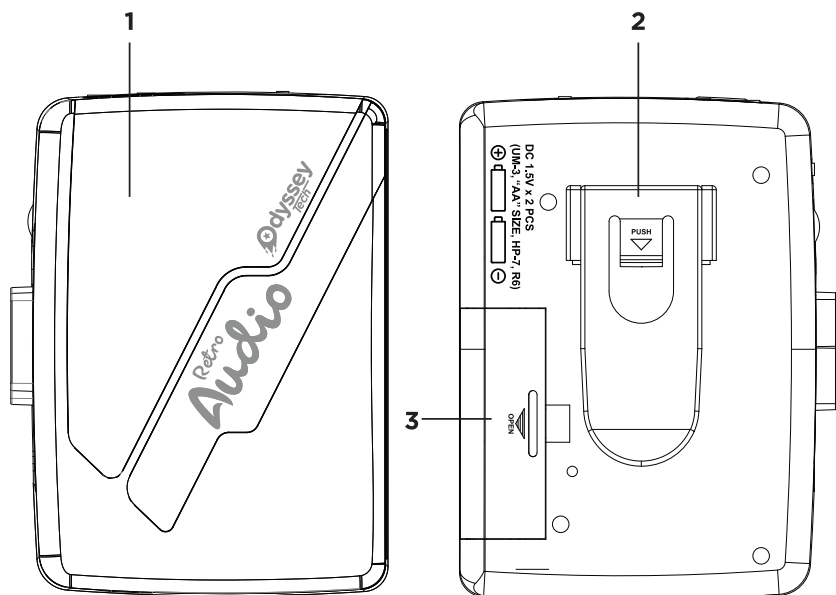


LOCATION OF CONTROLS

1. Cassette Door
2. Detachable Belt Clip
3. Battery Compartment
4. Stop
5. Fast Forward
6. Volume Knob
7. Play
8. Stereo Headphone Jack
9. Line-Out Jack
10. Function Selector
11. DC Jack

ALSO INCLUDES:

  Stereo Earphone
Aux in 3.5mm plug
to plug cable

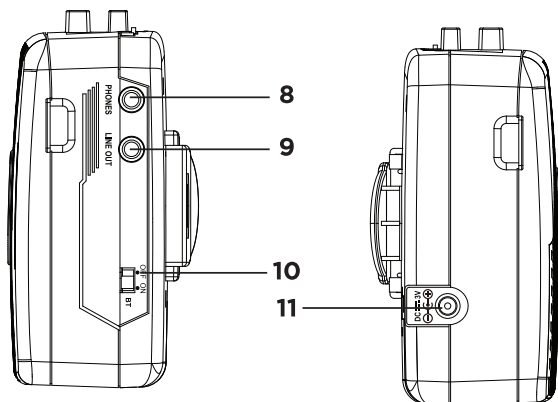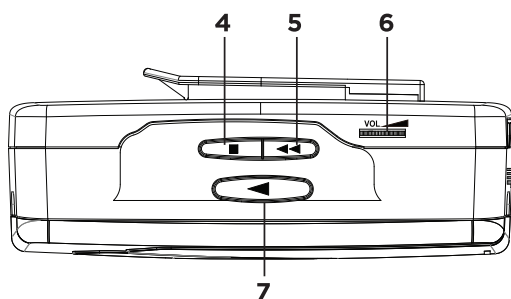

IMPORTANT SAFETY INSTRUCTIONS

1. **WARNING:** Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
2. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
3. **WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
4. Attention should be drawn to environmental aspects of battery disposal.
5. The rating and marking information are located at the bottom of the unit.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type

TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the appliance is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instruction should be retained for future reference.
3. **HEED WARNINGS** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating instructions should be followed.
5. **WATER AND MOISTURE** - The appliance should not be used near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement
6. **HEAT** - The appliance should be situated away from heat sources such as radiators, stoves, or other appliances (including amplifiers) that produce heat.
7. **POWER SOURCE** - The appliance should be connected to power supply only of the type described in the operating instructions or as marked on the appliance.
8. **POWER CORD PROTECTION** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
9. **OBJECT and LIQUID ENTRY** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
10. **SERVICING** - The user should not attempt to service the appliance beyond that described in the user operating instructions. All other servicing should be referred to qualified service personnel.

POWER SUPPLY

1. For battery power, this unit requires 2 x AA size batteries (Not included).
2. To power the device, plug the AC adapter 3V 600mA (Not included) into the AC power input on the rear of the unit and a standard power outlet

WARNING: Ensure that batteries are removed before using an AC adapter

POWER SOURCE

Set the FUNCTION switch to select different mode

- OFF = TAPE MODE
- ON = TAPE and BLUETOOTH MODE

VOLUME

Adjust the "VOLUME" knob to the desired volume level.

CASSETTE

1. Open the Cassette Door and inset the pre-recorded cassette tape with the exposed tape facing upwards
2. Close the Cassette Door
3. Press the PLAY button to do playback or pause playback temporarily
4. Press the FAST FORWARD button to rapidly advance the tape.
5. Press the STOP button to switch off
6. To REWIND simply eject the cassette and flip to the opposite side and press the FAST FORWARD button until it stops. Then return the cassette to the appropriate side.

AUTO STOP

To protect your cassette tapes and prevent unnecessary wear to the pinch roller of the cassette mechanism, this unit is equipped with an Automatic Stop System. When the tape ends during play or fast forwarding, the PLAY button will automatically release to stop the cassette from running.

CASSETTE TAPE HANDLING TIPS

1. High quality tapes are recommended to obtain maximum quality reproduction from recordings.
2. Tapes with playing time of 120 minutes (C-120) are not recommended because they contain thinner and longer tape that has a greater chance to malfunction and jam, which may damage the cassette mechanism.
3. To obtain good reproduction, the head should be cleaned after every 10 to 20 hours of use. It is also recommended that the cassette be kept away from excessive heat or cold.
4. If there is slack in the tape, remove the slack prior to inserting the cassette. To remove the slack, insert a pencil into the hub and rotate clockwise.
5. A leader tape is provided at the beginning on each cassette. There is no recording on this area, so it is necessary to let the tape run for about five seconds to clear the head.
6. Keep the tape head clean since a dirty head can cause distorted sound or improper tape speed. Depress the PLAY button and use

a small cotton swab with tape head cleaner or alcohol to clean the tape head, capstan and pinch roller.

BLUETOOTH®

1. Turn on the Bluetooth device (example: speaker, headphone or others)
2. Open the Cassette Door and inset the pre-recorded cassette tape with the exposed tape facing upwards
3. Close the Cassette Door
4. Press the PLAY button for playback or pause playback temporarily
5. Press the FAST FORWARD button to rapidly advance the tape.
6. Press the STOP button to switch off
7. Switch on the BT mode. The BT indicator light will flash which indicates pairing mode. Make sure that your BT device is set to searchable. The cassette player will find the nearest BT device and automatically connect. A connecting alarm can be heard.
8. Adjust the VOLUME control to your desired listening level on the Bluetooth device. The Cassette Player volume control will not support the Bluetooth device. Command functions are made on the Cassette Player
9. Switch off the BT mode to disconnect from Bluetooth pairing. A disconnecting alarm will be heard.

HEADPHONE JACK

1. Use 3.5mm headphone plug to connect the 3.5mm headphone jack

LINE OUT

1. Use 3.5mm audio cable to connect the 3.5mm stereo Line-Out jack and another external device.
2. Control the music from the device
3. Change the volume level on the external device.

TROUBLESHOOTING

SYMPTOMS & POSSIBLE SOLUTIONS	
No sound	If low or no power: Replace all batteries with new ones. If volume set at minimum: Increase Volume
Sound appears distorted at high volume setting	If volume control is set to maximum: Adjust Volume control to a lower comfortable level
Volume at minimum	Increase volume
Tape Sound distorted	Defective tape or dirty tape head - replace tape or clean tape head
Speed varies	Tape old or worn Dirty roller and capstan. Replace the tape, clean roller and capstan

TECHNICAL SPECIFICATIONS

Bluetooth Transmit	A2DP
Tape	90mins
Output connector	3.5mm earphone socket
Mains Power	3V ~ 600mA
Battery	3V 2x AA

For Customer Service please email: Care@OdysseyToys.com

Please note the units model number and name in your email:
Model no. ODY-1989 • Retro Audio – Bluetooth® Cassette Player

www.OdysseyToys.com



Please do not return this product to the store.

For questions or assistance on installation, parts or
operation contact: Odyssey Toys at 1-(305)-933-4480.

Hours of operation: 10:00am - 4:00pm EST

Email: Care@OdysseyToys.com

or visit us online at: www.odysseytoys.com/support

MADE IN CHINA

