

 
# MyPort User Manual

MyPort Wireless Charging PowerBank 10k mAh  
with Charging Stand

Qi-Wireless Charging, USB-C, USB-A  
Model No: RX-MYPORTBLK


## PACKAGE CONTENT

1. Power Bank x1
2. Charging Dock x 1
3. USB-C Cable x 1
4. User Manual x1



## OVERVIEW

### MyPort Wireless Charging Power Bank and Stand

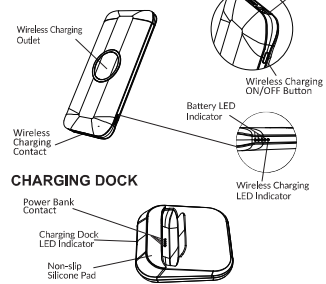

### CHARGING DOCK


## HOW TO USE

MyPort can charge your device in three different ways.


NOTE<sup>1</sup>: MyPort is able to charge only one device at a time.

### Charge Qi-enabled Smartphones


Use USB wall adapter (not included) to connect Charging Dock with the included USB cable. Recommended 18W adapter for best performance.

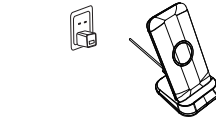

The wireless charging function will be automatically turned ON once the Power Bank is placed onto the Charging Dock.

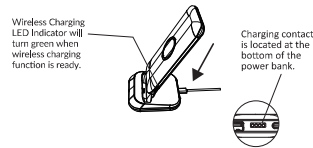

Lean your Qi-enabled smartphone vertically onto the Wireless Charging Stand. The LED indicator on the side of the battery bank will turn blue once your smartphone is successfully charging.

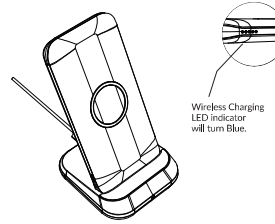

NOTE<sup>1</sup>: We recommend using an 18W USB adapter capable of 4.5V/3A or 9V/2A to enable 10W wireless charging.


NOTE<sup>2</sup>: Smartphone and battery bank will not charge at the same time while on dock. Once smartphone is fully charged, battery bank will resume charging.

NOTE<sup>3</sup>: USB ports will be disabled while on dock.


NOTE<sup>4</sup>: Caution: Battery will shut down in case of excess heat, voltage fluctuation or circuit abnormalities.

## POWER BANK (portable) Charge Qi-enabled Smartphones

Remove Power Bank from the Charging Dock

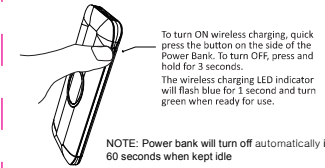


Place your Qi-enabled smartphone on the wireless charging power bank.

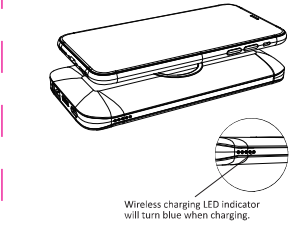

## Portable Power Bank charge the smartphone by cable

Use a USB-C or USB-A cable to charge any device. Connect your device to the power bank by using your device's charging cable. To check power bank battery level, press the side button once and check the LED on the opposite side.

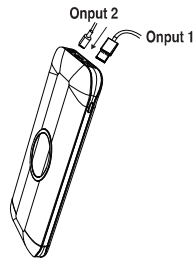


Using both USB ports to charge at the same time may decrease charging speed.

NOTE<sup>5</sup>: Wireless charging and USB charging are not supported at the same time.

## WAYS TO CHARGE YOUR POWER BANK

There are two ways to charge your power bank:

1. Use charging dock with recommended 18W adapter
2. Use a USB-C cable to connect directly to the power bank

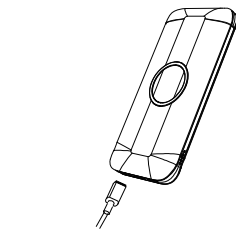

NOTE<sup>6</sup>: USB-C port on the power bank can be used to charge the power bank as well as charging a device (input & output).

## LED INDICATORS


Press the side button to check power bank battery level. There are four LED's on the opposite side each representing 25% of battery. When the Power Bank is charging, the LED indicators display the following:

LED 4	LED 3	LED 2	LED 1
0-25%	26-50%	51-74%	75-99%
LED 1 Blink	LED 1 ON & LED 2 Blink	LED 1-3 ON & LED 3 Blink	LED 1-3 ON & LED 4 Blink

NOTE<sup>7</sup>: LED indicators may turn off after 2 seconds while using the power bank on the go. Press side button to display LED indicators again. LED indicator will stay ON while placed on charging dock.

### WIRELESS CHARGING INDICATOR

GREEN	Ready for wireless charging
BLUE	Device is wirelessly charging properly
BLUE BLINKING	Device is not charging wirelessly (may not be placed correctly or check for interference)

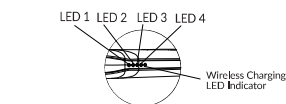

## SPECIFICATIONS

### POWER BANK

Rated Capacity	10000mAh/37Wh
USB-C Input	5V/3A, 9V/2A, 12V/1.5A
USB-C Output	5V/3A, 9V/2A, 12V/1.5A (PD 18W max)
USB Output	5V/3A, 9V/2A (PD 18W max)
Wireless Output (with Charging Dock)	10W Max
Wireless Output (Battery Pack)	10W Max
Wireless Transmission Distance	< 8mm
Wireless Conversion Efficiency	≤ 80%
Dimension	75(W)x152(L)x16(T)mm

### CHARGING DOCK

USB-C Input	5V/3A, 9V/2A, 12V/1.5A
Output	5V/3A, 9V/2A
Dimension	88(W)x92(L)x25(T)mm
Cable Length	Approx. 1000mm

## MAINTENANCE

To keep MyPort operating at its fullest potential, make sure to do the following:

1. Re-charge the power bank once every three months when not in use.
2. Keep your power bank dry and away from moisture.
3. Make sure the power bank is disconnected from power supply when cleaning.
4. Do not wash your power bank with harsh chemicals, soaps or detergents.

## WARNING

Read all instructions and warnings prior to using this product. Failure to read and follow these safety instructions could result in fire, explosion, electrical shock or other hazard, causing serious and / or fatal injury and/or property damage.

- DO NOT place this product in fire or other excessively hot temperature environments including intensive sunlight heat.
- DO NOT modify, disassemble, open, drop, crush, puncture or shred the product.
- DO NOT expose the product to rain or water.
- Keep away from open flame or sunlight to prevent heat build-up.
- Keep away from high voltage devices.
- DO NOT use in temperatures exceeding 110 degrees Fahrenheit.
- This product is not a toy, keep away from children. Insure that all persons who use the product read and follow these warnings and instructions.
- This product has gone through a thorough quality assurance inspection. If you find that your product or battery is excessively hot, is emitting odor, is deformed, scraped, cut or is experiencing or demonstrating an abnormal phenomenon, immediately stop all battery use.

Contact Us: support@rapidx.io