

BLACK+ DECKER®

INSTRUCTION MANUAL

Nail Trimmer



⚠️ WARNING:

Do not use rechargeable (Ni-Cd, Ni-HM, etc.) batteries.

BDXNTB042

Part No. TR-FUR-042-E14
English

Please read before returning this product for any reason.

Before operating the appliance, please read all safety and operating instructions. Save all instructions in a safe place for future reference.

Definitions: Safety Alert Symbols and Words

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk of personal injury or property damage.

⚠️ **DANGER:** Indicates an imminently hazardous situation which, if not avoided, **will** result in death or serious injury.

⚠️ **WARNING:** Indicates a potentially hazardous situation which, if not avoided, **could** result in death or serious injury.

⚠️ **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, **may** result in minor or moderate injury.

(Used without word) Indicates a safety related message.

⚠️ **NOTICE:** Indicates a practice **not related to personal injury** which, if not avoided, **may** result in property damage.

⚠️ **WARNING:** *Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.*

👤 **WARNING:** *To reduce the risk of injury, read the instruction manual.*

⚠️ **PROP 65 WARNING:** *This product can expose you to chemicals including Styrene, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov*

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliances, basic precautions should always be followed, including the following:

- ⚠ WARNING:** To reduce the risk of fire, electrical shock or injury:
- Please remove battery when not in use.
 - Use only as described in this manual. Use only manufacturer's recommended attachments.
 - Do not operate outdoors.
 - This appliance is intended for household use only and not for commercial or industrial use.
 - This appliance has small parts that can pose a choking hazard, shall not be used by children.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 - Do not put this product into the water as it will cause damage to the product.
 - Please do not disassemble and repair it by yourself, contact manufacturer when necessary.
 - Do not allow to be used as a toy. Close attention is necessary when near children.
 - Never modify the product or any part of it. Damage or personal injury could result.

COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- CAN ICES-003(B) / NMB-003(B)

SAFETY INSTRUCTIONS

⚠ WARNING:

- **Prevent unintentional starting. Ensure the switch is in the off-position before picking up or carrying the appliance.** Carrying the appliance with your finger on the switch invites accidents.
- **Have servicing performed by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the product is maintained.
- **Do not store or use the appliance near high temperature areas and keep away from direct sunlight.**
- **Do not operate the product if it has received a sharp blow, been dropped or otherwise damaged in any way.** Take it to an authorized service center.
- **Do not disassemble the product; take it to an authorized service center when service or repair is required.** Incorrect reassembly may result in a risk of electric shock, electrocution or fire.

CUSTOMER ASSISTANCE

Product Service & Support

For any questions about operating this new BLACK+DECKER branded product, PLEASE CONTACT US FIRST...do not return this product to the retail store. The contact information for support will vary depending on the country in which you purchased and utilize the product.

To obtain warranty service or other information for products purchased from CT Nova itself or through its authorized reseller or agent and utilized in the U.S.A., please visit **www.ctnovatech.com**. You will receive instructions on how to ship the products at your expense to an our Authorized Service Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; and, most

importantly; (c) your address and telephone number.

For further information needed on its features, please visit www.blackanddecker.com for frequently asked questions and the electronic manual.

©2022 CT Nova US LLC

4700 Duke Drive Suite 200, Mason, OH 45040, USA


Getting to know your Nail Trimmer

Design Features:


- Easy to control
- 2 levels control with clockwise & counter-clockwise motion
- Designed for the Whole Family
- Gentle night light

PRODUCT VIEW

1. Grinding head
2. Body (with night light)
3. Power switch
4. Battery cover
5. Storage case

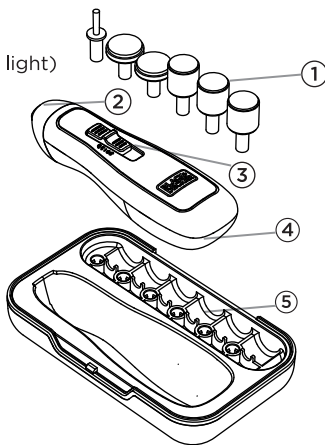

MAJOR COMPONENTS AND ATTACHMENTS

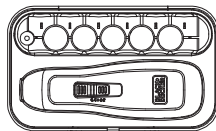

Machine with Travel Case



2 x AA alkaline batteries
(installed in machine)



Operation Manual

For Baby



Fine Grinding Head (Yellow)
below 11 months, Medium



Coarse Grinding Head (Green)
12 months and up, Hard

For Adult



Cylindrical Grinding Head
Grinds nail edges



Metal Grinding Head (Silver)
Grinds dead skin and calluses



Soft Polishing Head (pink)
Removes dry skin

SET UP AND USE

⚠ WARNING:

- Make sure the grinding head is correctly installed.
- When any abnormality/failure occurs, stop using the product immediately.
- Remove batteries before changing grinding head.

Working Modes:

- ↺ Rotating in counterclockwise on high speed
- ↺ Rotating in counterclockwise on low speed
 - Off mode
- ↻ Rotating in clockwise on low speed
- ↻ Rotating in clockwise on high speed

1. Insert 2 X AA batteries. Slide the battery cover down to open the battery compartment. Install and position 2 X AA batteries in correct polarity into the compartment. Then, replace the battery cover and close securely.
2. Choose grinding head. (See P.5 for usage of different grinding heads.)
3. Install the grinding head to the top of the unit.



4. Hold the finger / toe then select the desired speed level and trim nails.
5. To switch grinding heads, please switch off the trimmer, and pull the current one off and replace.

Note: When battery is low, there may be different light levels between high speed and low speed working modes or the light may turn off.

⚠ WARNING:

- Do not attempt to charge alkaline batteries.
- Do not use rechargeable (Ni-Cd, Ni-HM, etc.) batteries.
- Remove the batteries from the instrument if it is not required for extended periods of time in order to avoid damage to the appliance resulting from a leaking battery.
- Battery acid leakage can cause personal injury and cause damage to the product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes in contact with leaked battery acid. If a chemical burn occurs or if irritation persists, seek medical attention. Dispose according to Local, State, or Federal regulations.
- Batteries are to be inserted following the polarity markings on the product.
- NEVER mix old and new batteries or different brands of batteries. Replace all batteries at the same time.
- NEVER dispose of batteries in fire, as they may leak and explode.
- Promptly remove exhausted batteries from product.

TROUBLESHOOTING

Review this table to find do-it-yourself solutions for minor performance problems. Any other service needed should be performed by qualified service agent.

⚠ WARNING: *Always turn off and remove the battery from appliance before performing maintenance to the appliance. Failure to do so could result in electrical shock or personal injury.*

	Problem	Possible Cause	Solution
1.	The device does not work properly.	The battery is running low	Replace with 2 new AA batteries

⚠ WARNING: *To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment should be performed by CT Nova or a CT Nova authorized service center. Always use identical replacement parts.*

WARRANTY & TRADEMARK ACKNOWLEDGMENT

Three-Year Limited Warranty

CT Nova warrants to the original consumer purchaser only that this product and the component parts thereof, will be free from defects in workmanship and materials. CT Nova will, repair or replace, at its sole option and discretion, this product or any defective parts. CT Nova's liability hereunder shall be limited to repair or replacement of the defective part or parts, and such correction shall constitute a fulfillment of all of CT Nova's warranties hereunder.

This limited 3-year warranty is only valid for the original consumer purchaser in limited jurisdictions and is not transferrable. This limited 3-year warranty will automatically terminate if this product is sold or otherwise transferred to another party. The product must be purchased from CT Nova or an authorized dealer or the warranty is void. This limited 3-year warranty is valid only for products purchased and utilized in specific jurisdictions. Please visit our website at www.ctnovatech.com for a list of jurisdictions wherein this 3-year limited warranty is valid.

This limited 3-year warranty does not apply to accessories and consumables and does not cover damage due to misuse, abuse, negligence, acts of God, accident, commercial use or modification of, or to any part of this product. This warranty does not cover damage due to improper operation, maintenance or installation; ordinary wear and tear; or attempted alterations or repairs by anyone other than CT Nova or someone authorized by CT Nova to do warranty work. Any unauthorized alterations or repairs will void this warranty. This limited 3-year warranty does not cover product sold AS IS or WITH ALL FAULTS. This limited 3-year warranty is invalid if the factory applied serial number or date stamp has been altered, defaced or removed from this product. This limited 3-year warranty does not cover product purchased or utilized in a jurisdiction not covered.

The procedure for obtaining service and support, and the applicability of this warranty, will vary depending on the country or jurisdiction in which you purchase and utilize the

product. For details on obtaining product service, support and other warranty information please visit www.ctnovatech.com. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

EXCEPT AS EXPRESSLY SET FORTH IN THIS WARRANTY, CT NOVA MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. CT NOVA EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO THE TERMS OF THIS EXPRESSED WARRANTY.

LIMITATION OF REMEDIES AND DAMAGES. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. CT NOVA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO ATTORNEYS' FEES AND/OR COSTS OF LITIGATION, FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. CT NOVA IS NOT LIABLE FOR ANY DAMAGES CAUSED BY THE PRODUCT OR BY THE PRODUCT TO PERFORM, INCLUDING ANY LOST PROFITS, LOST SAVINGS, INCIDENTAL DAMAGES, OR CONSEQUENTIAL DAMAGES. CT NOVA IS NOT LIABLE FOR ANY CLAIM MADE BY A THIRD PARTY OR MADE BY YOU FOR A THIRD PARTY. THIS LIMITATION APPLIES WHETHER DAMAGES ARE SOUGHT, OR A CLAIM MADE, UNDER THIS WARRANTY OR AS A TORT CLAIM (INCLUDING NEGLIGENCE OR STRICT PRODUCT LIABILITY), A CONTRACT CLAIM, OR ANY OTHER CLAIM. THIS LIMITATION CANNOT BE WAIVED OR AMENDED BY ANY PERSON. THIS LIMITATION OF LIABILITY WILL BE EFFECTIVE EVEN IF CT NOVA OR AN AUTHORIZED REPRESENTATIVE OF CT NOVA HAS BEEN ADVISED BY YOU OF THE POSSIBILITY OF ANY SUCH DAMAGES.

Some states and countries do not allow limitations on how long an implied warranty lasts and do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

Provided that the product was purchased from CT Nova itself

or through its authorized reseller or agent and utilized in the U.S.A., CT Nova will, without charge, repair or replace, at its option, defective products, products or component parts upon delivery to the authorized CT Nova Authorized Service Center, accompanied by proof of the date of first customer purchase, such as a duplicated copy of a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service, but the return charges, to an address in the U.S.A, will be at CT Nova's expense, if the product is under warranty.

For Products Purchased Outside the U.S.A.

Please contact your authorized local reseller or agent for warranty information.

Trademark Acknowledgment

BLACK+DECKER® and the BLACK+DECKER Logo are trademarks of the BLACK+DECKER Industrial Tool Co., or an affiliate thereof and are used under license.

The color scheme is a trademark for BLACK+DECKER power tools & accessories.

© 2022 BLACK+DECKER

U.S. & Canada Only

Made in CHINA

Product Distributed by:

CT Nova US LLC

4700 Duke Drive, Suite 200, Mason, OH45040, USA

For product, service or warranty information contact us at:

www.blackanddecker.com

1-855-207-3922