

BLACK+DECKER

INSTRUCTION MANUAL

Digital Video Baby Monitor - PLUS



BDXNMBP01

Please read before returning this product for any reason.

Before operating the appliance, please read all safety and operating instructions. Save all instructions in a safe place for future reference.

Definitions: Safety Alert Symbols and Words

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk of personal injury or property damage.

▲ DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

▲ WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

▲ CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

(Used without word) Indicates a safety related message.

▲ NOTICE: Indicates a practice not related to personal injury which, if not avoided, may result in property damage.

▲ WARNING: This product can expose you to chemicals including Styrene, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov

▲ WARNING! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

▲ WARNING: To reduce the risk of injury, read the instruction manual.

DISPOSING OF APPLIANCE

Do not dispose of the appliance via household trash!

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

▲ WARNING: To reduce the risk of fire, electrical shock or injury:

• Shock Hazard. To protect against risk of electrical shock, do not plug the power adapter in water or other liquid.

• Use only as described in this manual. Use only manufacturer's recommended attachments.

• Never modify the product or any part of it. Damage or personal injury could result.

• Do not use with damaged cord or power adapter. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

• Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

• Do not operate outdoors.

• This appliance is intended for household use only and not for commercial or industrial use.

• Plug the plug directly into an electrical outlet.

• Do not handle power adapter with wet hands.

• Use the power adapter only in a standard electrical outlet (120V/60Hz).

• Turn off the switch before unplugging.

• Turn off the appliance if you need to remove.

• This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

• Place the appliance on a still and stable surface when in use.

• Pull the power adapter out of the socket when not in use.

• Never place items on top of the appliance when it is in use.

• Please store the product in a cool and dry location.

• If the chargers and power adapters are damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• This product is not a toy. Do not allow children to play with it.

• This Baby Monitor is not a substitute for responsible adult supervision.

• Keep this User's Guide for future reference.

• Do not place the Baby Unit or cords in the cot or within reach of the baby. The unit and cords must be more than 1 meter (3 feet) away.

• Keep the cords out of reach of children.

• Do not cover the Baby Monitor with a towel or blanket.

• Never use extension cords with power adapters. Only use the power adapters provided.

• Test this monitor and all its functions so that you are familiar with it prior to actual use.

• Do not use the Baby Monitor near water.

• Do not place the Baby Monitor near a heat source.

• Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.

• Place the parent unit more than 1 meter (3 feet) away from the baby unit to avoid unwanted feedback that could cause a high-pitched screeching noise.

• This appliance is intended for household use only and not for commercial or industrial use.

• Plug the plug directly into an electrical outlet.

• Do not handle power adapter with wet hands.

• Use the power adapter only in a standard electrical outlet (120V/60Hz).

• Turn off the switch before unplugging.

• Turn off the appliance if you need to remove.

• This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

• Place the appliance on a still and stable surface when in use.

• Pull the power adapter out of the socket when not in use.

• Never place items on top of the appliance when it is in use.

• Please store the product in a cool and dry location.

• If the chargers and power adapters are damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• If battery contents come into contact with the skin, immediately wash area with mild soap and water. If battery liquid gets into the eye, rinse water over the open eye for 10 minutes or until irritation ceases.

• Burn hazard. Battery liquid may be flammable if exposed to spark or flame.

• Fire hazard. Do not use a charger that has received a sharp blow, been dropped, run over or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on).

• Do not use the Baby Monitor with a towel or blanket.

• Never use extension cords with power adapters. Only use the power adapters provided.

• Test this monitor and all its functions so that you are familiar with it prior to actual use.

• Do not use the Baby Monitor near water.

• Do not place the Baby Monitor near a heat source.

• Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.

• Place the parent unit more than 1 meter (3 feet) away from the baby unit to avoid unwanted feedback that could cause a high-pitched screeching noise.

• This appliance is intended for household use only and not for commercial or industrial use.

• Plug the plug directly into an electrical outlet.

• Do not handle power adapter with wet hands.

• Use the power adapter only in a standard electrical outlet (120V/60Hz).

• Turn off the switch before unplugging.

• Turn off the appliance if you need to remove.

• This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

• Place the appliance on a still and stable surface when in use.

• Pull the power adapter out of the socket when not in use.

• Never place items on top of the appliance when it is in use.

• Please store the product in a cool and dry location.

• If the chargers and power adapters are damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• If battery contents come into contact with the skin, immediately wash area with mild soap and water. If battery liquid gets into the eye, rinse water over the open eye for 10 minutes or until irritation ceases.

• Burn hazard. Battery liquid may be flammable if exposed to spark or flame.

• Fire hazard. Do not use a charger that has received a sharp blow, been dropped, run over or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on).

• Do not use the Baby Monitor with a towel or blanket.

• Never use extension cords with power adapters. Only use the power adapters provided.

• Test this monitor and all its functions so that you are familiar with it prior to actual use.

• Do not use the Baby Monitor near water.

• Do not place the Baby Monitor near a heat source.

• Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.

• Place the parent unit more than 1 meter (3 feet) away from the baby unit to avoid unwanted feedback that could cause a high-pitched screeching noise.

• This appliance is intended for household use only and not for commercial or industrial use.

• Plug the plug directly into an electrical outlet.

• Do not handle power adapter with wet hands.

• Use the power adapter only in a standard electrical outlet (120V/60Hz).

• Turn off the switch before unplugging.

• Turn off the appliance if you need to remove.

• This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

• Place the appliance on a still and stable surface when in use.

• Pull the power adapter out of the socket when not in use.

• Never place items on top of the appliance when it is in use.

• Please store the product in a cool and dry location.

• If the chargers and power adapters are damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• If battery contents come into contact with the skin, immediately wash area with mild soap and water. If battery liquid gets into the eye, rinse water over the open eye for 10 minutes or until irritation ceases.

• Burn hazard. Battery liquid may be flammable if exposed to spark or flame.

• Fire hazard. Do not use a charger that has received a sharp blow, been dropped, run over or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on).

• Do not use the Baby Monitor with a towel or blanket.

• Never use extension cords with power adapters. Only use the power adapters provided.

• Test this monitor and all its functions so that you are familiar with it prior to actual use.

• Do not use the Baby Monitor near water.

• Do not place the Baby Monitor near a heat source.

• Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.

• Place the parent unit more than 1 meter (3 feet) away from the baby unit to avoid unwanted feedback that could cause a high-pitched screeching noise.

• This appliance is intended for household use only and not for commercial or industrial use.

• Plug the plug directly into an electrical outlet.

• Do not handle power adapter with wet hands.

• Use the power adapter only in a standard electrical outlet (120V/60Hz).

• Turn off the switch before unplugging.

• Turn off the appliance if you need to remove.

• This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

• Place the appliance on a still and stable surface when in use.

• Pull the power adapter out of the socket when not in use.

• Never place items on top of the appliance when it is in use.

• Please store the product in a cool and dry location.

• If the chargers and power adapters are damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• If battery contents come into contact with the skin, immediately wash area with mild soap and water. If battery liquid gets into the eye, rinse water over the open eye for 10 minutes or until irritation ceases.

• Burn hazard. Battery liquid may be flammable if exposed to spark or flame.

• Fire hazard. Do not use a charger that has received a sharp blow, been dropped, run over or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on).

• Do not use the Baby Monitor with a towel or blanket.

• Never use extension cords with power adapters. Only use the power adapters provided.

• Test this monitor and all its functions so that you are familiar with it prior to actual use.

• Do not use the Baby Monitor near water.

• Do not place the Baby Monitor near a heat source.

• Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.

• Place the parent unit more than 1 meter (3 feet) away from the baby unit to avoid unwanted feedback that could cause a high-pitched screeching noise.

• This appliance is intended for household use only and not for commercial or industrial use.

• Plug the plug directly into an electrical outlet.

• Do not handle power adapter with wet hands.

• Use the power adapter only in a standard electrical outlet (120V/60Hz).

• Turn off the switch before unplugging.

• Turn off the appliance if you need to remove.

• This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

• Place the appliance on a still and stable surface when in use.

• Pull the power adapter out of the socket when not in use.

• Never place items on top of the appliance when it is in use.

• Please store the product in a cool and dry location.

• If the chargers and power adapters are damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• If battery contents come into contact with the skin, immediately wash area with mild soap and water. If battery liquid gets into the eye, rinse water over the open eye for 10 minutes or until irritation ceases.

• Burn hazard. Battery liquid may be flammable if exposed to spark or flame.

• Fire hazard. Do not use a charger that has received a sharp blow, been dropped, run over or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on).

• Do not use the Baby Monitor with a towel or blanket.

• Never use extension cords with power adapters. Only use the power adapters provided.

• Test this monitor and all its functions so that you are familiar with it prior to actual use.

• Do not use the Baby Monitor near water.

• Do not place the Baby Monitor near a heat source.

• Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.

• Place the parent unit more than 1 meter (3 feet) away from the baby unit to avoid unwanted feedback that could cause a high-pitched screeching noise.

• This appliance is intended for household use only and not for commercial or industrial use.

• Plug the plug directly into an electrical outlet.

• Do not handle power adapter with wet hands.

• Use the power adapter only in a standard electrical outlet (120V/60Hz).

• Turn off the switch before unplugging.

• Turn off the appliance if you need to remove.

• This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

• Place the appliance on a still and stable surface when in use.

• Pull the power adapter out of the socket when not in use.

• Never place items on top of the appliance when it is in use.

• Please store the product in a cool and dry location.

• If the chargers and power adapters are damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• If battery contents come into contact with the skin, immediately wash area with mild soap and water. If battery liquid gets into the eye, rinse water over the open eye for 10 minutes or until irritation ceases.

• Burn hazard. Battery liquid may be flammable if exposed to spark or flame.

• Fire hazard. Do not use a charger that has received a sharp blow, been dropped, run over or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on).

• Do not use the Baby Monitor with a towel or blanket.

• Never use extension cords with power adapters. Only use the power adapters provided.

• Test this monitor and all its functions so that you are familiar with it prior to actual use.

• Do not use the Baby Monitor near water.

• Do not place the Baby Monitor near a heat source.

• Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.

• Place the parent unit more than 1 meter (3 feet) away from the baby unit to avoid unwanted feedback that could cause a high-pitched screeching noise.

• This appliance is intended for household use only and not for commercial or industrial use.

• Plug the plug directly into an electrical outlet.

• Do not handle power adapter with wet hands.

• Use the power adapter only in a standard electrical outlet (120V/60Hz).

• Turn off the switch before unplugging.

• Turn off the appliance if you need to remove.

• This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

• Place the appliance on a still and stable surface when in use.

• Pull the power adapter out of the socket when not in use.

• Never place items on top of the appliance when it is in use.

• Please store the product in a cool and dry location.

• If the chargers and power adapters are damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



1. Display (LCD screen)
2. VIDEO ON/OFF: Press to turn the LCD screen ON/OFF
3. UP button: Normal Mode: Tilt Up or Menu Mode: Up
4. DOWN button: Normal Mode: Tilt Down or Menu Mode: Down
5. MENU button: Press to open the Menu options
6. Talk button: Press and hold to speak to your baby
7. RIGHT button: Normal Mode: Pan Right or Menu Mode: Right
8. LEFT button: Normal Mode: Pan Left or Menu Mode: Left
9. OK button
10. Power adapter socket
11. Mic
12. LED Indicators
13. Audio level LEDs (4 Levels)
14. -Volume button
15. +Volume button
16. Power button

Press **≡** then press **◀ ▶ ▲ ▼** to select... ..

NOTE: After your selection press OK button.

A. Lullaby (Select **X** will randomly start playing sounds)

B. Alarm (Parent Unit will beep for about 45 seconds after every 2 / 4 / 6 hour period.)

C. Brightness (level 1 - 8)


D. Temperature unit

E. Battery power saving (only available when the Parent Unit is not connected with power adapter and you can press any key to switch the video back on)

F. Registration (Pairing)
The Baby Monitor is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit loses its link with the Parent Unit.

S. Battery Level

▲ WARNING: To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment should be performed by CT Nova or a CT Nova authorized service center. Always use identical replacement parts.

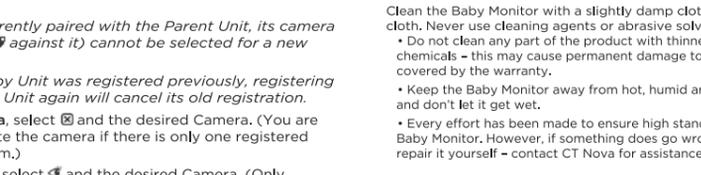

1. off
2. 2h
3. 4h
4. 6h
5. 1
6. 2
7. 3
8. 4
9. 5
10. 6
11. 7
12. 8
13. 1
14. 2
15. 3
16. 4

Press **≡** then press **◀ ▶ ▲ ▼** to select... ..

NOTE: After your selection press OK button.

A. Lullaby (Select **X** will randomly start playing sounds)

B. Alarm (Parent Unit will beep for about 45 seconds after every 2 / 4 / 6 hour period.)

C. Brightness (level 1 - 8)


D. Temperature unit

E. Battery power saving (only available when the Parent Unit is not connected with power adapter and you can press any key to switch the video back on)

F. Registration (Pairing)
The Baby Monitor is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit loses its link with the Parent Unit.

S. Battery Level

▲ WARNING: To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment should be performed by CT Nova or a CT Nova authorized service center. Always use identical replacement parts.

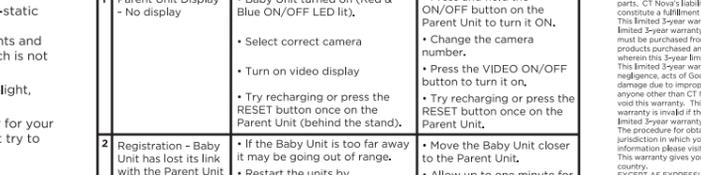

1. off
2. 2h
3. 4h
4. 6h
5. 1
6. 2
7. 3
8. 4
9. 5
10. 6
11. 7
12. 8
13. 1
14. 2
15. 3
16. 4

Press **≡** then press **◀ ▶ ▲ ▼** to select... ..

NOTE: After your selection press OK button.

<