

Printed in China.

1-800-374-2744.

FOR CUSTOMER SUPPORT, PLEASE CALL

IRVINE, CA 92618. ALL RIGHTS RESERVED.

DISTRIBUTED BY AND © 2021 MERCHSOURCE, LLC.

TRADEMARKS OR REGISTERED TRADEMARKS.

THE 77 LOGO, TOMORROW'S TOMORROW) ARE

SHARPER IMAGE® NAME AND LOGOS (INCLUDING

POWER CONSORTIUM.

THE 'Q!' SYMBOL IS A TRADEMARK OF THE WIRELESS

important information for future reference.

prior to use. Keep this manual as it contains

Please read all instructions and warnings

CONGRATULATIONS ON YOUR PURCHASE OF THE LAPTOP DESK.

DUAL MODE + WIRELESS CHARGING

LAPTOP DESK

SHARPER IMAGE®



SAFETY WARNINGS

PLEASE READ BEFORE USE

- Not a children's item. Keep out of the reach of children.
- Do not use attachments of any kind other than those that may be included.
- For indoor use only.
- To avoid pinching, injury, or property damage, always use caution when adjusting the work surface angle and when closing the foldable legs.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

DANGER:

- To reduce the risk of electric shock, always unplug this appliance from the electrical outlet immediately after using and before cleaning.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1) This device may not cause interference.
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC: 21808-1015963

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To maintain compliance with the RF exposure guidelines, place the product at least 20cm from nearby persons.

Pour rester en conformité avec les consignes d'exposition aux RF, placez le produit à au moins 20 cm des personnes proches.


FCC ID: 2AEVM1015963




CONTENTS

- a. Laptop Desk
- b. Mouse pad with wireless charging
- c. Removable cushion
- d. USB-C power cable

 
a.

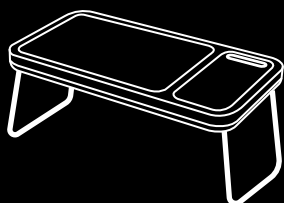


b.

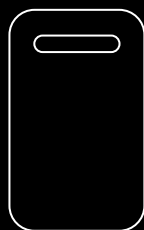 

c.

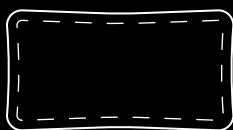 


d.

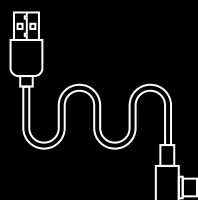 

GETTING STARTED

 POWER

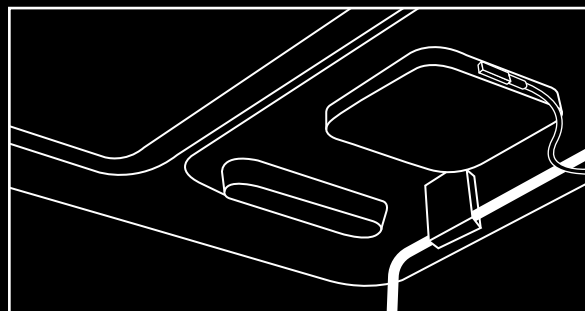


The laptop table is equipped with a 10W Qi charger.

1. Locate the USB-C port directly underneath the Qi charger inside the fabric mouse pad on the back of the desk.
2. Connect the USB-C power cable into the port.
3. Plug the other end of the cable into a USB power adapter and plug the power adapter into a wall outlet.
4. The Qi charger will be ready for use.


FEATURES

 DESK MODE

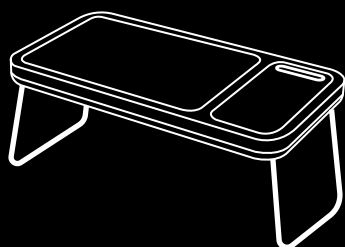


Fold out the legs located on the underside of the Laptop Desk

 LAP MODE

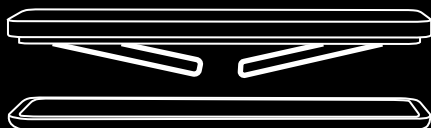

With the legs folded closed, slip the removable cushion into the clips on the underside of the Laptop Desk.

 ANGLE ADJUSTMENT

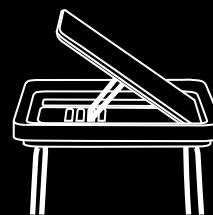

Lift the left side of the work surface and align the stand with the grooves to lock the work surface into place at the desired angle.

Note: Remove all items from the work surface before adjusting the angle.

MOUSE PAD WITH WIRELESS CHARGING



Charge Qi compatible devices on the charging pad or use the fabric surface as a mouse pad.

Optionally, stand up your smartphone in the slot at the top of the mouse pad for easy operation and viewing. Wireless charging will not function in the phone stand.