


40 oz. double wall vacuum sealed stainless steel tumbler with flip top lid and removable handle

- Before first use and after each use, wash all parts in warm, soapy water, rinse thoroughly, and ensure each part is completely dry before reassembly
- Straw and removable handle are top rack dishwasher safe.
 Tumbler and lid are hand wash only
- Do not clean with products that contain bleach or chlorine
- Do not clean with abrasive cleaners or scrubbers
- This product is not for microwave use do not use in microwave
- Not for use in the freezer
- Ensure lid is securely fastened before using Note: The lid flap should be in the open position when securing onto the vessel
- This product is able to keep liquids hot or cold for extended periods of time, please allow hot liquids to cool before securing lid and consuming
- Do not use with liquids over 180 degrees Fahrenheit
- Do not overfill tumbler. Hot liquids can scald user
- Keep out of reach of children when filled with hot liquids

To Use:

- For best results, pre-heat or pre-chill tumbler prior to use.
 Fill with hot or cold water, attach lid and let stand for 5 minutes then empty
- To drink, flip lid flap into the open position
- To close, flip lid flap into closed position and press down to ensure it is sealed
- To use with straw, open lid flap and insert straw with straw stopper through the underside of the lid, then screw lid onto tumbler to secure
- To use with removable handle, refer to the below diagram and instructions:

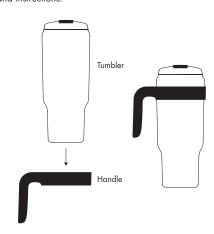

- To use, slide tumbler into the handle from the top, until the rim is securely around the top portion of the tumbler. Make sure handle is secured to tumbler before drinking.
 Note: If handle becomes hard to remove from the tumbler, add a little water to wet the tumber and handle and then slide off.
- · Use caution when handling with hot beverages.

IMPORTANT: Handle is intended to be used only with this 40 oz. tumbler.