

ONE-YEAR LIMITED WARRANTY

LIMITED WARRANTY

The Company warrants this product to the original purchaser to be free from defects in workmanship and materials under normal use and service for 1 year from the date of purchase.

The Limited Warranty is void if any of the following occur: a.) Failure of the product resulting from accident, abuse or misuse; b.) the product has been altered or tampered with in any way without first contacting Customer Service for authorization; c.) the product was not used correctly or the product was not maintained according to the care instructions.

LIMITATIONS: THE FORGOING LIMITED WARRANTY IS THE SOLE WARRANTY AND THERE ARE NO OTHER WARRANTIES OF ANY KIND, EXPRESS AND/OR IMPLIED. COMPANY HEREBY DISCLAIMS ANY AND ALL OTHER WARRANTIES, EXPRESS AND/OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT AND FITNESS OF THE PRODUCT FOR A PARTICULAR PURPOSE. IN NO EVENT WILL COMPANY BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES ARISING FROM, OUT OF OR RELATED TO THE PRODUCT OR YOUR USE THEREOF.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Company will not be responsible for damages or losses, direct or indirect, caused by misuse, abuse, accident, negligence, conditions of transportation or storage, or failure to follow the accompanying written instructions. The Company will not be responsible for any statements that are made or published, written or oral, that are inconsistent with this written warranty, or which are misleading or inconsistent with the facts as published in the literature or specifications by the Company.

LIMITED WARRANTY CLAIM PROCEDURE: During the 1-year Limited Warranty period, a defective product will be repaired or replaced by the Company with the same or a similar model without charge. However, return shipping will be at the expense of the consumer. If product has been discontinued and is no longer available and/or cannot be repaired or replaced, you will receive a prorated refund of purchase price.

 
Any consumer returning a defective product for exchange or repair after 30 days will receive a refurbished product in exchange.

In the unlikely event that your unit does not appear to be working properly, please have your proof of purchase handy and contact Customer Service at 1-800-225-6595. Prior to your call, we encourage you to visit www.edenpuresupport.com for numerous troubleshooting tips and possible service instructions (if needed). You can also email us at custserv@edenpure.com

Thank you

EdenPURE®

OPERATION AND WARRANTY MANUAL

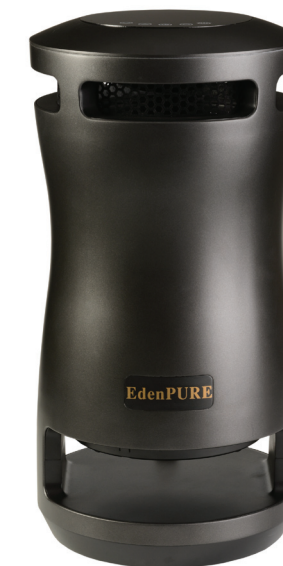

360 SUPER CLIMATER®
MODEL 200

IMPORTANT SAVE THESE INSTRUCTIONS

To ensure you get the best results from your 360 Super Climater, please read this manual first and keep it for future reference. For additional information, please contact your place of purchase or call 1-800-225-6595

Thank you for choosing EdenPURE®

Patented
Breakthrough
Design

U.S. Patent No.
D799,014

IMPORTANT SAFETY INSTRUCTIONS

WARNING

IMPROPER USE OF THIS HEATER COULD RESULT IN RISK OF FIRE, ELECTRIC SHOCK, AND INJURY TO PERSONS

WARNING

ANY REQUIRED SERVICE SHOULD ONLY BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE AND ANY OTHER REPAIRS ATTEMPTED BY ANYONE OTHER THAN AN AUTHORIZED SERVICE REPRESENTATIVE WILL VOID THE WARRANTY.
FOR AUTHORIZED SERVICE, CALL 1-800-225-6595 OR VISIT WWW.EDENPURESUPPORT.COM

 


WARNING
RISK OF ELECTRICAL SHOCK DO NOT OPEN
NO USER-SERVICEABLE PARTS INSIDE



READ ALL SAFETY INSTRUCTIONS BEFORE USING THE 360 SUPER CLIMATER® MODEL 200

1. This heater's grill is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and the rear.
2. Extreme caution is necessary when any heater/cooler is used by or near children or invalids and whenever the unit is left operating and unattended.
3. Always unplug unit when not in use.
4. Do not operate any unit with a damaged cord or plug, or after it has been dropped or damaged in any manner. In such cases, return the unit to an authorized service facility for inspection/repair.
5. Do not use the unit outdoors or on construction sites.
6. The unit is not intended for use in bathrooms, laundry areas and similar indoor locations, areas with standing water, a shower or swimming pool. Never place the heater where it may fall into a bathtub or other water container.
7. Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Arrange the cord away from traffic areas and where it will not be tripped over.
8. To disconnect the unit, turn the unit off, then remove the plug from the outlet once it has stopped running.
9. Do not plug the unit into any other cord-connected device such as a power strip, surge protector, multiple outlet adapter, grounding adapter or outlet-type air fresheners. **Plug into a 3-prong 110v 15amp or higher grounded circuit receptacle only.** Do not plug the heater into a loose-fitting or broken receptacle. The heater is for use on 110 volt outlets. The cord has a plug as shown at "A" in Figure below.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock or fire, or damage the unit.
11. To prevent a possible fire, do not block, or place anything in the front, sides or rear of the unit.
12. Do not use in areas where gasoline, paint or flammable liquids are used or stored.
13. Some EdenPURE® units contain a button battery for the remote. If swallowed, it could cause severe injury or death in just two hours. Seek medical attention immediately.
14. Use this unit only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons and may void the warranty.
15. Manual restart may be required if power to this unit is interrupted.

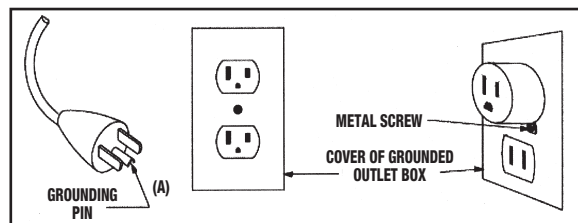

SAVE THESE INSTRUCTIONS

PRODUCT SETUP

- 1) Unpackage unit. We recommend keeping the packaging for storage and any transporting needs.
- 2) Find a level and unobstructed location to place the unpackaged unit.
- 3) Plug the power cord directly into an unused grounded 110 volt 15 amp or higher circuit receptacle.
- 4) Remove the tab in the remote control to activate the battery of the remote control.
- 5) Make sure the POWER SUPPLY button, on the back of the unit, is in the ON position.
- 6) Press the POWER button in the control panel to turn on the unit.
- 7) To turn the unit off, press the POWER button; the fan will continue to run until all of the heat or air has been expelled.

FUNCTIONS

Display Setting: The 360 Super Climater® Model 200 is equipped with multiple temperature scales, i.e. Fahrenheit and Celsius. To change between these scales, press and hold the **Mode** button until the display flashes. Pressing the **TIMER** button will cycle through the scales. Stop pressing the **TIMER** button once your preferred scale is displayed. The display will stop flashing in a few moments. You can continue normal operation of the unit after the display stops flashing.

Auto ON Timer: With the unit OFF, press the **TIMER** button to select the number of hours you want the unit to wait until it powers on. You can select between 1-24 hours. Unit will power on at the last heat setting it was operated at.

Auto OFF Timer: With the unit ON, press the **TIMER** button to select the number of hours you want the unit to operate before it turns off. You can select between 1-24 hours.

To disengage the timer feature, simply press the **TIMER** button until the timer is no longer indicated on the display.

Mode Function: Press the **MODE** button when you wish to run the unit at a lower noise/power level.

Press and hold "Mode" and use arrow keys to adjust display brightness.

Fan Mode: Speeds High to Low: FF F9 F8 F7 F6 F5 F4 F3 F2 F1

PRODUCT MAINTENANCE

Cabinet Care – Wipe clean with a soft damp cloth.

Storage – When the unit is not going to be used for an extended period of time, please do the following:

- 1) Unplug the unit.
- 2) Wind up electrical cord so as to keep it off of the ground.
- 3) Cover the unit to prevent dust from accumulating on filter or internally.
- 4) Store the unit in a dry, low dust environment.

FILTER MAINTENANCE

The EdenPURE 360 Super Climater® Model 200 comes equipped with an easy-access, washable filter.

For best results clean filter often; a clogged filter will cause the unit to not work to it's full capacity.

1. Turn off the power switch on the rear of unit.
2. Unplug unit and let it cool completely.
3. Twist the filter cover and pull it straight down.
4. Run warm tap water over the filter, the opposite direction of airflow, until water runs clear. The filter might excrete some filtered residue, so be cautious not to drip on any stainable surfaces such as carpeting. You can also soak the filter in water mixed with a small amount of mild dish soap (don't forget to rinse with water after soaking filter).
5. Shake the filter over a sink until excess water is removed and allow it to drip dry completely before reinstalling. **DO NOT** force the filter to dry using any alternative methods. Wait until filter is completely dry before reinstalling.
6. Reinstall the filter back underneath where the air intake is.

Follow us/Like us



facebook.com/Edenpure



instagram.com/
edenpureproducts



twitter.com/
edenpure_



pinterest.com/
Edenpure

RECOMMENDATIONS

To assure maximum performance of the EdenPURE® Super Climater® Model 200, please note the following recommendations:

- 1) For best results, do not locate the heater in an area with a high rate of air filtration and movement as the warm air will be exhausted.
- 2) Placing the unit next to a cold air return will draw the heat/air away from area. Try closing or covering the cold air return. This will allow for more efficient usage. Experiment with the placement of the unit to see what works best for you.
- 3) To ensure maximum efficiency, a 40% (minimum) relative humidity should be maintained in the heated environment.
- 4) In rooms with large areas of bare concrete, try placing the unit a few feet above the floor. Make sure the unit is secure and won't fall. This will allow for more efficient usage since concrete acts as a heat sink and will tend to draw the heat in its direction.
- 5) Try setting your central heating system to a lower temperature and placing the unit in the area you spend the majority of your time. For cooling feature, set your central air to a higher temperature. Now set the EdenPURE® Climater® Model 200 to your comfort level. After all, there is no point to heating or cooling multiple rooms when they are not in use.
- 6) Extreme caution is necessary when any appliance is used by or near children or invalids and whenever the unit is left operating and unattended.
- 7) To disconnect the unit, press power button to "off," then remove plug from outlet once it has stopped running.
- 8) Always unplug unit when not in use.

TROUBLESHOOTING

Why does the blower fan keep running after I have turned off the ON/OFF switch?

The blower fan will continue to run until the proprietary heat chambers have cooled down. After a few minutes the fan will shut off automatically.

The unit's airflow seems to have diminished.

Make sure the intake is not blocked.

Will I be able to use the unit to heat a basement or garage?

Yes, but keep in mind that rooms with little insulation will not retain the heat as efficiently. Bare concrete floors, which act as a heat sink with any type of heating, will absorb some of the heat. Placing the heater a few feet above the floor will allow for more efficient heating.

Can I use more than one heater/fan at a time?

Yes, but you should make sure they are not on the same circuit. Each heater and/or appliance should be on its own circuit.

Can I move the unit around while it is operating?

It is not recommended to move any portable heater or fan while it is operating. We recommend moving the unit only after the fan has completely turned off.

Can I use the unit and another appliance at the same time?

Yes, as long as they are not on the same circuit. Zone heaters and fans are considered to be an appliance. You should not run more than one large appliance on a single circuit breaker. Your freezer, refrigerator, microwave oven, washing machine, dryer, and other such appliances should not share a circuit breaker.

My unit lost power. What should I do?

Unplug from wall and plug back in. If unit does not power up or shuts down again, please visit your place of purchase, call 1-800-225-6595 or visit www.edenpuresupport.com.

Why doesn't the temperature on my unit match the temperature display on my wall or external thermostat?

If using the Celsius or Fahrenheit temperature display for your unit, the temperature on your unit may vary from the temperature display on another thermostat (like the one mounted on your wall or a purchased external thermostat). The temperature sensor on your unit reads the temperature in and around the unit. The unit is near a cold floor, and heat rises, so it will detect and display a cooler temperature than elevated or external thermostats. The best way to operate your unit is to just set it to a temperature that feels comfortable to you.

SERVICE – For repairs or service, please visit your place of purchase, call 1-800-225-6595 or visit www.edenpuresupport.com.

WARNING

ANY REQUIRED SERVICE OTHER THAN FILTER MAINTENANCE SHOULD ONLY BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE