



1. AUX input
2. USB-C charging
3. TF slot
4. Volume - | Previous track
5. Volume + | Next track
6. Play / Pause / Handsfree
7. ON/OFF | Mode BT/TF/AUX
8. Led indicator

CHARGING INSTRUCTIONS

1. Connect the USB Type C cable to the « **USB-C** » connector (2), then to a USB socket or the mains supply via an AC adapter (not supplied). Once the battery is fully charged, disconnect the cable.
 2. Press hold the main power button (7) to switch on the product.
- The LED indicator (8) will turn red while charging. Once fully charged, the red LED will turn off.

FUNCTION

ON / OFF



BT / AUX / TF MODE

- Long press
- Short press

PRESS THE KEY



BUTTON

7

6

5

4

5

4

7

USING TF & MICRO SD

1. Insert a TF or micro SD memory card into the « **TF** » slot (3).
 2. Press the « **ON / OFF | MODE** » button (7) to switch to « **TF** » mode.
- (You simply need to press the « **MODE** » button (7) several times to select the TF function.)

USING AUX INPUT

1. Insert a cable jack 3.5 in the « **AUX** » (1), to the product will automatically play the music
- (As soon as you plug in a cable the AUX mode switches automatically)

HANDS-FREE FUNCTION

Incoming call : Briefly press the « **Play/Pause** » button (6) to accept the call, or press and hold to reject the call

End call : Briefly press the « **Play/Pause** » button (6) or operate the cell phone to end the call.

TROUBLESHOOTING

No power supply : Check that the product is charged.

Automatic shutdown : battery protection is automatically activated when the battery is low, so please use it after recharging for 3 hours

 
No sound from the product when playback is activated

A Check that the volume is not set to minimum

B Check that the correct signal source has been selected.

C Check that the audio source is not

CHARGING



CAUTION:

if the product is to be left unused for a long time, leave the battery fully charged, otherwise the battery may be damaged !

Recharge the product at least every 2 months.

Do not expose your device to extreme temperatures (above 50°C) (e.g. direct sunlight in a closed vehicle, near a heat source or radiator, etc.). High temperatures can damage the product and reduce battery life.

PAIRING AND BT CONNECTIVITY

1. Press and hold the mains « **POWER** » button (7) to switch on the product.
 2. Activate the wireless audio function on your device (smartphone, tablet, etc.).
 3. Select « **LDCL** » from the list of devices found.
- (Note: the product automatically enters Bluetooth mode when switched on)